



Heated Towel Warmers

Installation and Warranty

Punch Round Heated Towel Warmers

Punch Square Heated Towel Warmers

Punch Slim Heated Towel Warmers

www.punchnz.nz

INSTALLATION INSTRUCTIONS

HEATED TOWEL WARMERS

PRHT | PSHT | PSHTRSLIM | PRHTRSLIM

PRIOR TO INSTALLATION

WARNING:

In order to avoid a hazard for very young children, this appliance should be installed so that the lowest heated rail is at least 600mm above the floor.

IMPORTANT:

A means of disconnection in the fixed wiring must be used, which is in accordance with national wiring rules (i.e. AS/NZS3000)

Care must be taken with fibres (other than cotton, eg microfibre) and other materials with non-slip backing as these may have low heat resistance and could be damaged.

Your Punch Towel Warmer uses only minimal electrical power - about the same as an average traditional light bulb. It will take approximately 20-30 minutes to reach maximum operating temperature. Punch Towel warmers are designed for any usage pattern. NOTE: The temperature of your towel warmer will vary with the ambient temperature of your room. A towel warmer is designed to warm and assist the drying of towels and will normally operate at a temperature that is too hot for the warmer to be grasped for an extended time.

LOCATING INSTRUCTIONS

Detailed installation instructions follow. Punch Ladder Towel Warmers should be fixed through the wall cladding directly to studs or other suitable anchor material. The towel warmer should be located in compliance with the AS/NZS 60335 Standard and should not in any circumstances be located in the direct path of a water source (tap or shower etc). Punch towel warmers have an IP45 rating offering you the greatest flexibility to safely locate the towel warmer in bathrooms or shower rooms in Zone 1-3. All other electrical fittings must also be compliant with the zone within which the warmer is being installed.

ELECTRICAL INSTALLATION

Ensure your towel warmer is installed by a registered electrician and ensure the electrical supply, switch location, and product location will comply with your local regulations.

New Zealand electrical wiring requirements stipulate that this appliance must be wired by a registered electrician in accordance with current electrical wiring regulations. This product must be used in conjunction with a hard wired isolation switch. For temperature control a wall mounted dimmer switch (with "off" position) may be used.

CONCEALED WIRING KIT

A concealed wiring adapter kit is included with this product. If you have access to the wall cavity the kit allows you to conceal the electrical flex for a more streamlined and visually appealing installation.

Disclaimer: Products in this specification manual must by regulation be installed by a trades person. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

INSTALLATION INSTRUCTIONS

HEATED TOWEL WARMERS

PRHT | PSHT | PSHTRSLIM | PRHTRSLIM

THIS PACKAGE CONTAINS:

- 1 Ladder Towel Warmer 1 x Concealed adaptor fixing barrel (optional)
- Electrical Flex 4 x Mounting Screws to fix Mounting Barrels to wall
- 2 x Top Mounting Legs with Mounting Barrel & Grub Screw & (Separate) Fixing bolt
- 1 x Bottom Mounting Leg (Non Flex Leg) with Mounting Barrel & Grub Screw
- 1 x Bottom Mounting Leg (Flex Leg) with Plastic Trim & flat or half round Fixing bracket & grub Screw

INSTALLATION INSTRUCTIONS

CAUTION: Prior to installation please ensure the product is to your satisfaction (i.e. is square and free of blemishes). Once installed, Harrison Bloy cannot be responsible for defects in the product or its finish. If the supply cord is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. This product is not intended for use by young children or infirmed persons without supervision

This towel warmer must be installed by a registered electrician and in accordance with local and national electrical codes. We recommend that the towel warmer be installed vertically on a flat and uniform wall, and where possible into studs or other suitable anchor material. If fixing to hollow cavity walls, Toggle Anchors (not those supplied) or similar devices must be used.

Position the towel warmer so that the plug and mains power receptacle are easily accessible, with the cable entry to the towel warmer NEAREST THE FLOOR. Avoid the supply cable coming into contact with the heated parts of the towel warmer.

Disclaimer: Products in this specification manual must by regulation be installed by a trades person. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

INSTALLATION INSTRUCTIONS


HEATED TOWEL WARMERS

PRHT | PSHT | PSHTRSLIM | PRHTRSLIM

DO NOT SWITCH THE TOWEL WARMER ON BEFORE INSTALLATION AND SAFETY CHECKS ARE COMPLETE.

2

Identify the three different types of mounting legs per the above descriptions and attach the two top mounting legs to the towel warmer with the fixing bolts (After removing the fixing barrels & making sure the grub screw will face the floor) the grub screw will face the floor).

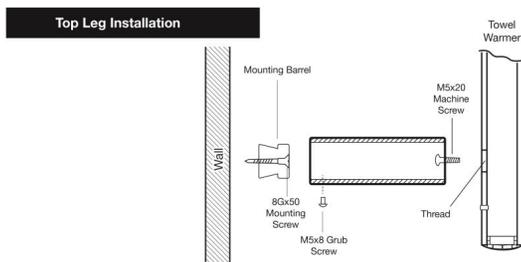

4

Thread the "Flex Leg" on to the electric flex (ensuring that the leg is facing in the correct direction). On the foot that will receive the electric flex, remove the cap from the electric flex that protrudes from the towel warmer. Plug in the electric flex and firmly secure it by screwing together the two pieces of the connector fitting. Fix the leg to the towel warmer with the two screws provided.

6

Hold the towel warmer in position and mark around one of the top legs. Remove the towel warmer and fix the mounting barrel to the wall.

8

Place the towel warmer onto the two mounting barrels and mark the location of the two bottom legs.

10


Ensure the flex exits the leg through the slot with the plastic edge.

1

If the towel warmer is being installed with a concealed electric flex, read those instructions before returning to this point as preparatory work is required before the wall cladding is installed onto the walls.

3


Decide which side the electric flex is to be connected and then connect the "Non Flex" Leg to the bottom of the towel warmer that will not house the electric flex (After removing the fixing barrel & making sure the grub screw will face the floor). Also before attaching the leg, make sure the cap that covers the electrical connection/wires is in place.

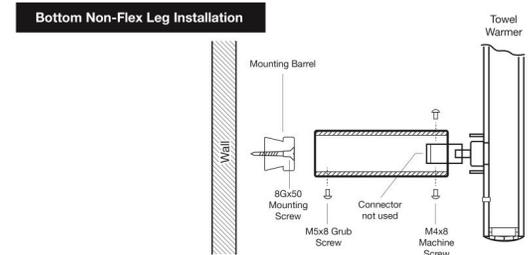

5

If the warmer is being installed without using the concealed adaptor (i.e. the electric flex is to be visible) proceed to the next step. If the towel warmer is being installed with a concealed wiring fixing adaptor, proceed to that section.

Exposed Wiring Installation

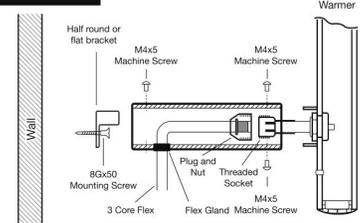

7

Ensuring that mounting points are level (horizontal), mark the second point. Fix the mounting barrel to the wall. Should the towel warmer not be sitting square, do not proceed further with installation without rectifying problem.

9

Remove the towel warmer and fix the remaining mounting barrel and fixing bracket to the wall. Ensure that the metal fixing bracket is used for the foot that contains the electric flex. (The other three feet will use the same style of fixing barrel).

11

Place the towel warmer in position and secure it to the fixing barrels using the grub screws and machine screw for the flex leg.

Disclaimer: Products in this specification manual must by regulation be installed by a trades person. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

INSTALLATION INSTRUCTIONS

HEATED TOWEL WARMERS

PRHT | PSHT | PSHTRSLIM | PRHTRSLIM

CONCEALED WIRING INSTALLATION INSTRUCTIONS


1

Ensure that the flush box that the towel warmer will be wired to can be reached by the flex from the mounting position of the towel warmer. Allow for loss of flex length due to connections.

3

Identify the side of the stud facing the flush box that the towel warmer will be wired to. On that side of the stud, drill a 25mm deep hole at right angles to this first hole so that the hole will break into the base of the first hole. Refer to Fig1.


Towel Warmer Concealed Wiring Installation

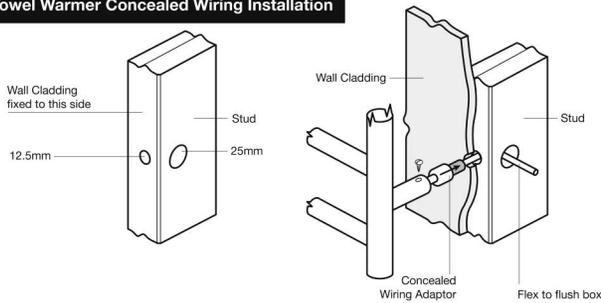

2

Drill a 12.5mm hole to the face of the stud where the towel warmer foot with the flex is to be positioned. Drill the hole approx 25mm deep. (On masonry walls drill a 14mm hole.)

Concealed Wiring Installation

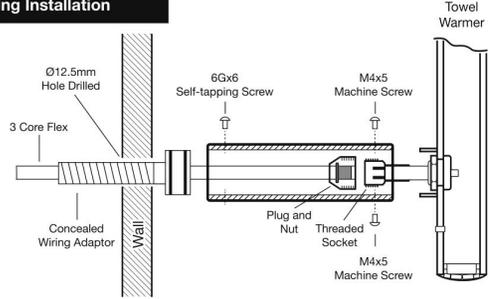

4

Place a pull through line from the flush box and out the 12.5mm hole so that the line can be picked up later once the wall cladding is in place

5

When the wall cladding is installed, a hole will be required to provide access to the above 12.5 mm hole in the stud. Locate the pull through and leave hanging out of the hole that has been created in the wall cladding. (NOTE: care must be taken to ensure that the hole created in the wall cladding is a lesser diameter than that of the towel warmer leg to ensure that the hole in the cladding will be concealed by the towel warmer leg when it is fixed into position)

6

When installing the towel warmer, thread the pull through line, through the concealed mounting adaptor and screw the mounting adaptor into position. The pull through line should now exit through the concealed wiring adaptor. (On masonry walls epoxy resin the adaptor into position). (refer Fig 2)

7

For the second bottom leg of the towel warmer mark a point horizontally from the centre of the adaptor at the measurement for your model (but check the actual measurements to your warmer as manufacturing tolerances apply) for the other bottom fixing barrel. It is important that the line between these two points is level.

8

Screw the other bottom mounting bracket into place with the screws provided.

9

Attach the pull through to the flex and pull the flex through the stud holes to the flush box.

10

Position the towel warmer on the bottom two mounting brackets / barrels and mark the position of the two top feet. (Use easy to remove pencil)

11

Mark the centre distance for the top mounting brackets / barrels (per above) & screw the mounting brackets / barrel to the wall. Remount the towel warmer on the four mounting brackets / barrels. Secure the foot containing the flex with the screws provided, then secure the three remaining feet with the screws provided

Disclaimer: Products in this specification manual must by regulation be installed by a trades person. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

INSTALLATION INSTRUCTIONS

HEATED TOWEL WARMERS

PRHT | PSHT | PSHTRSLIM | PRHTRSLIM

CONSUMER GUARANTEES ACT 1993 ("CGA")

The warranty referred to in this booklet do not limit or affect your rights and remedies under the CGA. The manufacturers' warranties are in addition to your rights and remedies under the CGA. For further information on your rights and remedies under the CGA please go to consumerprotection.govt.nz.

CARE AND CLEANING

The finish of your Towel Warmer is made to the highest standards and is easily maintained. Clean regularly with a damp soft cloth. Do not use ammoniated or abrasive cleaning agents. Failure to regularly clean the product may result in surface deterioration.

WARRANTY

Product	Warranty
Heated Towel Warmers	7 Years

All guarantees are subject to terms and conditions* and available on request or can be viewed at <https://www.punch.nz.nz/>

This product is warranted against defects due to faulty workmanship or materials for 7 years from date of purchase. In the event of a defect in the product, turn it off at the wall, and contact the retailer from which it was purchased and provide details from your sales receipt and the products serial number from the label on the towel warmer. Harrison Bloy will contact the manufacturer who will assess the matter and if accepted as a valid warranty claim the product will be repaired or replaced at Harrison Bloy's option – free of charge. Costs of disconnection, reconnection, and freight are the responsibility of the owner, as is any damage arising in transit to and from servicing by Harrison Bloy. This warranty does not cover:

- a. Any damage to the product caused by misuse, neglect, accident, or in violation of the manufacturer's instructions, or
- b. Any damage, loss or injury arising as a consequence of the use of the product.

Disclaimer: Products in this specification manual must by regulation be installed by a trades person. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

