


ENYA

Wastes & Traps

INSTALLATION MANUAL

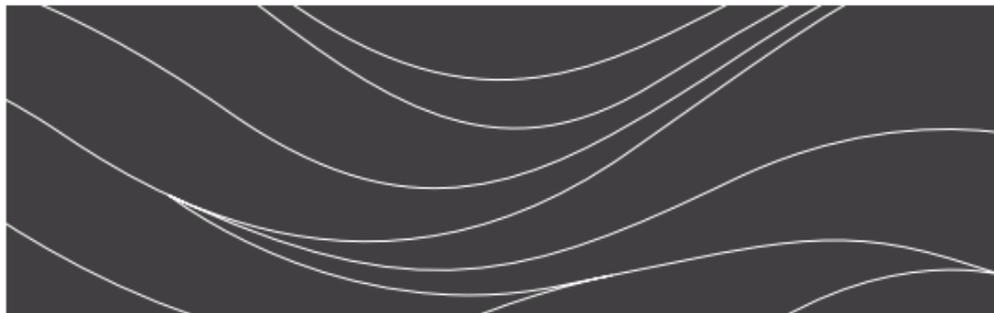

OPERATION AND MAINTENANCE


TOOLS YOU WILL NEED:

Adjustable wrench Hexable wrench Phillips Screwdriver Pipe Tape




We recommend that pop-up wastes be inspected and cleaned on a weekly basis to ensure proper drainage and prevent blockages.

PRODUCT DETAILS



NO	NAME
1	Cap
2	Anti wear ring
3	Copper rod
4	Bottom cup
5	Foam gasket
6	Spacer
7	Bottom cup
8	Stainless steel screw


STEPS

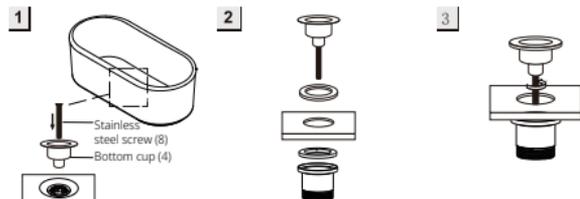

1 Insert the Stainless steel screw (8) into the Bottom cup (4).

2 Insert the foam gasket (5) into the bathtub overflow port. Install the spacer (6) onto the drain outlet.

3 Turn the stainless steel screw (9) to secure it in place.

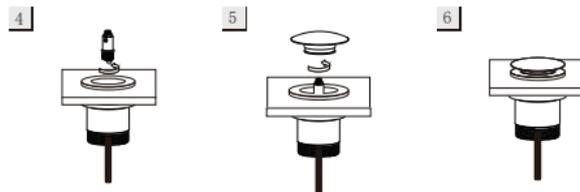

4 Install by turning copper rod (3) until firmly secured.

5 Turn the cap (1) to install.

6 Done, check carefully again to see if there is any leakage.

OPERATION AND MAINTENANCE



TOOLS YOU WILL NEED:

Adjustable wrench Hexable wrench Phillips Screwdriver Pipe Tape




We recommend that pop-up wastes be inspected and cleaned on a weekly basis to ensure proper drainage and prevent blockages.

PRODUCT DETAILS

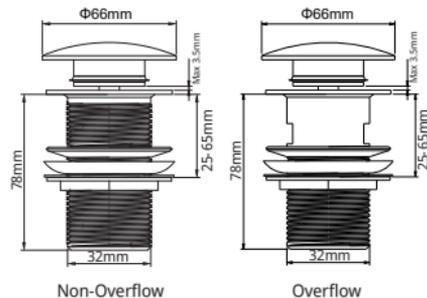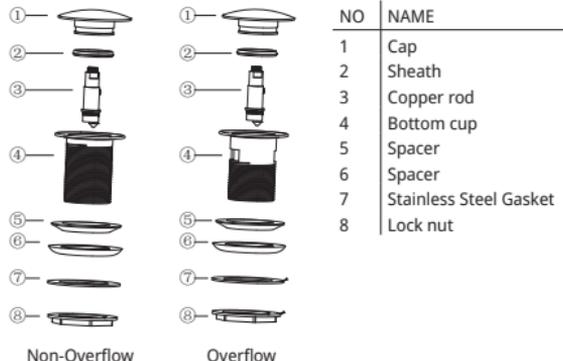

STEPS

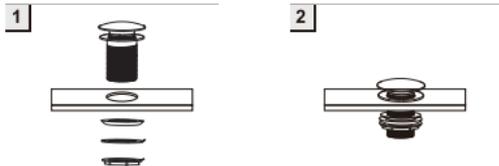

Put the main body into the sink, and place Spacer (6), Stainless steel gasket (7) and Lock nut (8) under the sink.


Done, check carefully again to see if there is leakage.

OPERATION AND MAINTENANCE

1. Comply with local pipeline installation regulations.
2. Turn off the main water source.
3. Install the water supply and drain bends before positioning the basin, whenever possible.
4. Pre-install the wall drainage pipe according to the required installation size of the wall drainage bend.


The inner diameter of the tube should be slightly larger than $\text{Ø}32$ mm (recommended between 33–36 mm). It may protrude slightly beyond the finished wall, but by no more than 10 mm. For the drainage bend pipe, the horizontal pipe should extend into the drainage pipe by at least 25 mm.

PRODUCT DETAILS

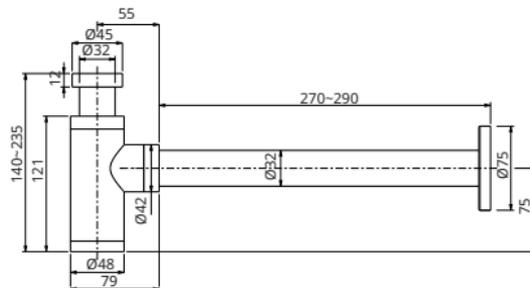


STEPS

FOR WALL MOUNTED SHOWERS:

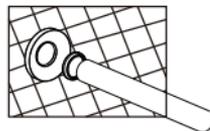

Step 1

Insert the pipe into the drain stub-out. Install the rubber washer.

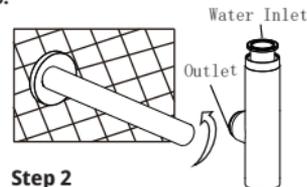

Step 2

Connect the water inlet and then insert the drain stub out into the Outlet.



November 2025

www.harrisonbloy.co.nz | info@harrisonbloy.co.nz | 0800 508 009